



Original	Rechange
Standby	Power
USB	SRC
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0/10	0
10+	-/- / EPG
Time	P/C / FAV
SUB/MP3	MEDIA
Angle	Red (A)
Audio	Audio

Original	Rechange
Mute	MUTE
Menu	MENU
Setup	VOD
Up	UP
Down	DOWN
Left	LEFT
Right	RIGHT
Enter	OK
Title	TV/R
L/R	Green (B)
>>	Rewind
Play	Fast Forward
Pause	Play
PBC	Yellow (C)
Stop	Pause
I<<	Stop
	First



