










 

 



 









 









 



 












 




 




 


 




Original		Recharge		Original		Recharge	
	Standby/On		Power		I<<		I<<
	1		1		>>I		>>I
	2		2		Play		Play
	3		3		Stop		Stop
	4		4		<<		<<
	5		5		>>		>>
	6		6		Mute		Mute
	7		7		Prog+		Ch +
	8		8		Prog-		Ch -
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	Tv/DVD		TV/R		Menu		Menu
	Open/Close		Eject		Return		Back
	DTV/Analog		Smart		Exit		Exit
	Input Sel		AV		Title List/Disc Menu		Media
	Copy		Options		Play List/Title Menu		Shift + Menu
	Pause		Pause		Red		Red





Original	Recharge
Green	Green
Yellow	Yellow
Blue	Blue
Guide	Guide
Info	Info
Subtitle	Subt
Text	Text
Tv/Radio	Sleep
FAV List	Pre Ch
Marker	Shift + Options
Rec	Rec
Audio	Dual
Rec Mode	Shift + Rec
Rec	Format
Repeat	Shift + Text
OK	Ok
Up	Up

Original	Recharge
Down	Down
Right	Right
Left	Left
USB	Shift + Media
Timer	Shift + AV
HDD	Shift + Smart











 


 














 


 









 






 


 

 






	Original	Rechange	Original	Rechange
	Input Sel		AV	AV
	1		1	1
	2		2	2
	3		3	3
	4		4	4
	5		5	5
	6		6	6
	7		7	7
	8		8	8
	9		9	9
	0		0	0
	Prog+		Ch +	Ch +
	Prog-		Ch -	Ch -
	Standby/On TV		Power	Power
	Mute Tv		Mute	Mute
	Tv Vol+		Vol +	Vol +
	Tv Vol-		Vol -	Vol -

 






 




 








	Original	Recharge		Original	Recharge
	Standby/On		Power		I<<
	1		1		>>I
	2		2		Play
	3		3		Stop
	4		4		<<
	5		5		>>
	6		6		Prog+
	7		7		Prog-
	8		8		Menu
	9		9		Return
	0		0		Exit
	Tv/DVD		TV/R		Title List/Disc Menu
	Open/Close		Eject		Play List/Title Menu
	DTV/Analog		Smart		Red
	Input Sel		AV		Green
	Copy		Options		Yellow
	Pause		Pause		Blue
					Red
					Green
					Yellow
					Blue
					Shift + Menu





Original		Rechange		Original		Rechange	
	Guide		Guide		USB		Shift + Media
	Info		Info		Timer		Shift + AV
	Subtitle		Subt		HDD		Shift + Smart
	Text		Text				
	Tv/Radio		D. Menu				
	FAV List		Pre Ch				
	Marker		Shift + Options				
	Rec		Rec				
	Audio		Dual				
	Rec Mode		Shift + Rec				
	Rec		Format				
	Repeat		Shift + Text				
	OK		Ok				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				

