 











 

 



 

 

 



 


 
 




	Original	Rechange
	Standby	 Power
	USB	 AV
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9
	0/10	 0
	10+	 Guide
	Time	 +  Shift + AV
	SUB/MP3	 Media
	Angle	 Red
	Audio	 Dual

	Original	Rechange
	Mute	 Mute
	Menu	 Menu
	Setup	 Options
	Title	 TV/R
	L/R	 Green
	Up	 Up
	Down	 Down
	Right	 Right
	Left	 Left
	Enter	 Ok
	<<	 <<
	>>	 >>
	Play	 Play
	Pause	 Pause
	Stop	 Stop
	I<<	 I<<
	>>I	 >>I





Original		Rechange	
	PBC		Yellow
	Vol+		Vol +
	Vol-		Vol -
	V-Mode		Format
	Repeat		Text
	N/P		Blue
	Clear		Exit
	Prog		Sleep
	A-B		3D
	Zoom		Eject
	Slow		Smart
	Random		D. Menu
	Return		Back
	Display		Info
	Step		Subt

Original		Rechange	

