



Original	Recharge
Input Sel	AV / Input / RDS
Standby/on	Power
Open/Close	Eject / Surround
Tv Standby/On	Shift + Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Tv/DVD	TV/Radio /
0	0
A-B/Repeat	Shift + Yellow / YouTube /
I<<	I<< / Preset-

Original	Recharge
Subtitle	Subtitle / EQ
Repeat	Shift + Green / APP /
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
Play/Pause	Play / Slow
>>	>> / Tune+
Tv Vol+	Vol+
Audio/Tv Mute	Mute / Dimmer
Prog +	CH+ / Page+
Tv Vol-	Vol-
Prog -	CH- / Page-
Menu	Menu / Home
Return	Back / Return
Up	Up
Left	Left
OK	OK





 

 







 

 

 
 
 







 

 

 

 



 

Original	Recharge
Right / Title List/Disc Menu	D.Menu / Top
Info	Info / Angle
Exit	Exit / Cancel / Clear
Play List/Title Menu	Setup / OPT /
Red/A	Red / Netflix / Search
Green/B	Green / APP / Repeat
Yellow/C	Yellow / YouTube / Repeat
Blue/D	Blue / Prime Video / Random
Copy	Text / Goto
Marker	Fav / Marker / PC
Rec Mode	Shift + Rec / Rec Mode
Timer	Sleep / Timer
Rec	Rec / Rec Mode
Rec	Pause / Step / Freeze

Original	Recharge





Original	Rechange
 DVD	 Shift + 2
 HDD	 Shift + 7
 Input Sel	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 Prog+	 CH+ / Page+
 Vol-	 Vol-

Original	Rechange
 Prog-	 CH- / Page-

