


 



 
 


 



 







 

 











 
















 


 














Original	Recharge	Original	Recharge
 Power	 Power	 4	 4
 Source	 AV	 5	 5
 Rec	 Rec	 6	 6
 Play	 Play	 7	 7
 Pause	 Pause	 8	 8
 Stop	 Stop	 9	 9
 Lang	 Dual	 0	 0
 <<<	 <<<	 Tv	 TV/R
 >>>	 >>>	 Back	 Shift + Back
 Text	 Text	 Up	 Up
 Red	 Red	 Down	 Down
 Green	 Green	 Right	 Right
 Yellow	 Yellow	 Left	 Left
 Blue	 Blue	 OK	 Ok
 1	 1	 Menu	 Menu
 2	 2	 Exit	 Exit
 3	 3	 BACK	 Back





Original		Rechange		Original		Rechange	
	Q.Menu		D. Menu				
	O		Options				
	Music/Photo		Eject				
	*/o		Subt				
	*/Search		Sleep				
	Tv List		List				
	i		Info				
	[≡]		Guide				
	Size		Format				
	Vol+		Vol +				
	Vol-		Vol -				
	PR+		Ch +				
	PR-		Ch -				
	Mute		Mute				

