

 





 

 

 

 

 

 













 






Original	Recharge
 Power	 Power
 SD Card	 Display / Media
 Input TV	 TV/Radio /
 Input AV	 AV / Input / RDS
 Menu	 Menu / Home
 [+]/Aspect	 Picture / Format
 N	 Sound / Title
 Direct Rec TV	 Shift + Rec / Rec Mode
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Viera Tools	 D.Menu / Top
 Viera Link	 Smart / List
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right

Original	Recharge
 Option	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 [=◆]/STTL	 Subtitle / EQ
 [=i]/Index	 Eject / Surround
 [=+]/Hold	 Shift + Stop /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original	Recharge	Original	Recharge
7	7	II>/Step	Pause / Step / Freeze
8	8	Rec	Rec / Rec Mode
9	9		
Mute	Mute / Dimmer		
0	0		
Recall/Last View	Fav / Marker / PC		
Vol+	Vol+		
PR+	CH+ / Page+		
Vol-	Vol-		
PR-	CH- / Page-		
Power Down	Shift + Power		
PR- Down	Shift + CH- /		
PR+ Down	Shift + CH+ /		
<</I<<	<< / Tune-		
Play	Play / Slow		
>>/>>I	>> / Tune+		
Stop	Stop / Hold		

Original	Recharge	Original	Recharge
TV	DVD	SAT	AUX
SLOW	STEP - FREEZE	HOLD	REC MODE
TUNE-	TUNE+	PRESET-	PRESET+
TITLE	LANG VUI	EQ	SURROUND
SOUND	AUDIO	SUBTITLE	PROGRAM
FORMAT	SIZE	TIMER	TV RADIO
PICTURE	ZOOM	SLEEP	RDS
TOP MENU	OPT-TOOLS	GOTO	AV INPUT
D.MENU	SETUP	TEXT	
HOME	ANGLE		
MENU	OK	INFO	
CLEAR	RETURN	BACK	
EXIT	CANCEL		
VOL+	SMART	CH PAGE+	
VOL-	MEDIA	CH PAGE-	
TV	DISPLAY	CD - STB	
1	TAPE	TUNER	
4	5	6	
AUX - HDD	USB	BLUETOOTH	
7	8	9	
GUIDE EPG	HDMI - BAT	PC	
0	FAV MARKER		
NETFLIX	APP	YouTube	Prime Video
SEARCH	REPEAT	REPEAT A-B	RANDOM
 www.mandis.tv			

