 

















 















 





Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV/CL	 AV / Input / RDS
 Zoom	 Zoom / Size
 [...] / Subtitle	 Subtitle / EQ
 Audio / Language	 Audio / Lang I / II
 ◀ / Camera	 Shift + Info / Angle
 ?	 Setup / OPT /

Original	Rechange
 ECO	 Display / Media
 CEC	 Smart / List
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z / Back	 Back / Return
 PR+	 CH+ / Page+
 Up	 Up
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 PR-	 CH- / Page-
 TVG / Top Menu	 Guide / EPG / -/--
 TVG / Top Menu	 D.Menu / Top
 TXT / Menu	 Text / Goto

 

















 







 









 













 





















Original	Recharge	Original	Recharge
	TXT/Menu		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Shift + Zoom /
	Rec/ >		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<		<< / Preset-
	>		>>  / Preset+
	<<		<< / Tune-
	>>		>> / Tune+





Original		Rechange		Original		Rechange	
	Power		Power		ECO		Display / Media
	1		1		CEC		Smart / List
	2		2		Mute		Mute / Dimmer
	3		3		i		Info / Angle
	4		4		Z/Back		Back / Return
	5		5		PR+		CH+ / Page+
	6		6		Up		Up
	7		7		Vol-		Vol-
	8		8		Left		Left
	9		9		OK		OK
	0		0		Right		Right
	AV/CL		AV / Input / RDS		Vol+		Vol+
	Zoom		Zoom / Size		Down		Down
	[...]/Subtitle		Subtitle / EQ		PR-		CH- / Page-
	Audio/Language		Audio / Lang I/II		TVG/Top Menu		Guide / EPG / -/--
	◀/Camera		Shift + Info / Angle		TVG/Top Menu		D.Menu / Top
	?		Setup / OPT /		TXT/Menu		Menu / Home





Original	Recharge	Original	Recharge
TXT/Menu	Text / Goto		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
[ <> ]	Shift + Zoom /		
Rec/l>	Rec / Rec Mode		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
Stop	Stop / Hold		
<	<< / Preset-		
>	>>  / Preset+		
<<	<< / Tune-		
>>	>> / Tune+		





Original	Rechange	Original	Rechange
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/CL		AV / Input / RDS
	Zoom		Zoom / Size
	[...]/Subtitle		Subtitle / EQ
	Audio/Language		Audio / Lang I/II
	◀/Camera		Shift + Info / Angle
	?		Setup / OPT /
	ECO		Display / Media
	CEC		Smart / List
	Mute		Mute / Dimmer
	i		Info / Angle
	Z/Back		Back / Return
	PR+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	PR-		CH- / Page-
	TVG/Top Menu		Guide / EPG / -/--
	TVG/Top Menu		D.Menu / Top
	TXT/Menu		Text / Goto

 

















 












 











 



 











 












Original	Recharge	Original	Recharge
TXT/Menu	Menu / Home		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
[ <> ]	Shift + Zoom /		
Rec/l>	Rec / Rec Mode		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
Stop	Stop / Hold		
<	<< / Preset-		
>	>>  / Preset+		
<<	<< / Tune-		
>>	>> / Tune+		





Original	Rechange	Original	Rechange
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV/CL		AV / Input / RDS
	Zoom		Zoom / Size
	[...]/Subtitle		Subtitle / EQ
	Audio/Language		Audio / Lang I/II
	◀/Camera	 + 	Shift + Info / Angle
	?		Setup / OPT /
	ECO		Display / Media
	CEC		Smart / List
	Mute		Mute / Dimmer
	i		Info / Angle
	Z/Back		Back / Return
	PR+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	PR-		CH- / Page-
	TVG/Top Menu		Guide / EPG / -/--
	TVG/Top Menu		D.Menu / Top
	TXT/Menu		Text / Goto





Original	Recharge	Original	Recharge
	TXT/Menu		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Shift + Zoom /
	Rec/l>		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+

