



 



 


 




 




 
 


 
 










 




 



 



 

 

 



 



 



 
 
























| Original | | Rechange | | Original | | Rechange | |
|---|------------------|---|---------------------------|---|---------------|---|-----------------------|
|  | Power |  | Power |  | 6 |  | 6 |
|  | Sleep |  | Sleep / Timer |  | +10 |  | Guide / EPG / -/- |
|  | Display Mode RDS |  | Display / Media |  | Phono |  | Shift + 7 |
|  | Select PTY |  | Yellow / YouTube / Repeat |  | 7 |  | 7 |
|  | Search PTY |  | Red / Netflix / Search |  | 8 |  | 8 |
|  | VCR |  | Shift + 4 |  | 9 |  | 9 |
|  | CD |  | Shift + 3 |  | 0 |  | 0 |
|  | Tuner / Band |  | Shift + 6 |  | Play CD |  | Play / Slow |
|  | Auto / Mono |  | Audio / Lang I/II |  | Pause CD |  | Pause / Step / Freeze |
|  | VDP |  | Shift + 2 |  | Stop CD |  | Stop / Hold |
|  | 1 |  | 1 |  | I<< CD |  | I<< / Preset- |
|  | 2 |  | 2 |  | >>I CD |  | >>I / Preset+ |
|  | 3 |  | 3 |  | Open/Close CD |  | Eject / Surround |
|  | Disc |  | Fav / Marker / PC |  | Repeat CD |  | Green / APP / Repeat |
|  | EXT |  | Shift + 1 |  | Program CD |  | TV/Radio / |
|  | 4 |  | 4 |  | Cancel CD |  | Exit / Cancel / Clear |
|  | 5 |  | 5 |  | < Tape |  | Left |





| Original | Rechange |
|--|---|
|  Stop Tape |  OK |
|  Tape > |  Right |
|  << Tape |  Down |
|  >> Tape |  Up |
|  Open/Close |  Back / Return |
|  Deck 1/2 Tape |  Smart / List |
|  Rec Pause Tape |  Info / Angle |
|  Prologic |  Sound / Title |
|  Delay Time |  Zoom / Size |
|  Balance L |  Shift + Left |
|  Balance R |  Shift + Right |
|  Test |  Text / Goto |
|  Center - |  Shift + Down |
|  Center + |  Shift + Up |
|  Surround - |  CH- / Page- |
|  Surround + |  CH+ / Page+ |
|  Muting -20dB |  Mute / Dimmer |

| Original | Rechange |
|--|--|
|  Volume - |  Vol- |
|  Volume + |  Vol+ |

