



Original	Recharge
 Open/Close	 Eject / Surround
 HDD	 Shift + 7
 DVD	 Shift + 2
 Power	 Power
 1	 1
 2	 2
 3	 3
 Prog+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Input	 AV / Input / RDS
 Audio	 Audio / Lang I/II

Original	Recharge
 0	 0
 Clear	 Exit / Cancel / Clear
 TV/DVD	 TV/Radio /
 Subtitle	 Subtitle / EQ
 Angle	 Shift + Info / Angle
 [≡]	 Text / Goto
 Menu	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 System Menu	 Setup / OPT /
 Title List / Top Menu	 D.Menu / Top
 Guide	 Guide / EPG / -/-
 Timer	 Sleep / Timer
 Up	 Up
 Info	 Info / Angle





Original		Rechange		Original		Rechange	
	Left		Left		Rec Stop		Shift + Stop /
	Enter		OK		DUB /HDD/DVD		Shift + 8
	Right		Right		Rec Mode		Shift + Rec / Rec Mode
	Exit / Return		Back / Return		Zoom		Zoom / Size
	Down		Down		Vol+ Tv		Vol+
	Display		Display / Media		Prog + Tv		Shift + CH+ /
	I<< / Page-		I<< / Preset-		Power Tv		Shift + Power
	←		Shift + Left		Play Mode		Smart / List
	→		Shift + Right		Vol - Tv		Vol-
	>>I / Page +		>>I / Preset+		Prog - Tv		Shift + CH- /
	<< / <II / <I / Day-		<< / Tune-		Input Tv		Shift + AV / Input / RDS
	Play		Play / Slow				
	Day + / I> /II> / >>		>> / Tune+				
	TV Pause		Shift + Pause / Step / Step /				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				
	Rec		Rec / Rec Mode				





Original	Rechange
 Open/Close	 Eject / Surround
 HDD	 Shift + 7
 DVD	 Shift + 2
 Power	 Power
 1	 1
 2	 2
 3	 3
 Prog+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Input	 AV / Input / RDS
 Audio	 Audio / Lang I/II

Original	Rechange
 0	 0
 Clear	 Exit / Cancel / Clear
 TV/DVD	 TV/Radio /
 Subtitle	 Subtitle / EQ
 Angle	 Shift + Info / Angle
 [≡]	 Text / Goto
 Menu	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 System Menu	 Setup / OPT /
 Title List / Top Menu	 D.Menu / Top
 Guide	 Guide / EPG / -/-
 Timer	 Sleep / Timer
 Up	 Up
 Info	 Info / Angle







 


 
 

 



 
 
 



 

 

 

 

 



 



 

 





 

 

 

 

 



 

 
 
 

 




 


Original	Rechange
	Left
	Enter
	Right
	Exit / Return
	Down
	Display
	I<< / Page-
	←
	→
	>>I / Page +
	<< / <II / <I / Day-
	Play
	Day + / I> / II> / >>
	TV Pause
	Pause
	Stop
	Rec

Original	Rechange
	Rec Stop
	DUB /HDD/DVD
	Rec Mode
	Zoom
	Vol+ Tv
	Prog + Tv
	Power Tv
	Play Mode
	Vol - Tv
	Prog - Tv
	Input Tv





 





 





 







 



 









Original		Rechange		Original		Rechange	
	Open/Close		Eject / Surround		0		0
	HDD		Shift + 7		Clear		Exit / Cancel / Clear
	DVD		Shift + 2		TV/DVD		TV/Radio /
	Power		Power		Subtitle		Subtitle / EQ
	1		1		Angle		Shift + Info / Angle
	2		2		[≡]		Text / Goto
	3		3		Menu		Menu / Home
	Prog+		CH+ / Page+		Red		Red / Netflix / Search
	4		4		Green		Green / APP / Repeat
	5		5		Yellow		Yellow / YouTube / Repeat
	6		6		Blue		Blue / Prime Video / Random
	Prog-		CH- / Page-		System Menu		Setup / OPT /
	7		7		Title List / Top Menu		D.Menu / Top
	8		8		Guide		Guide / EPG / -/-
	9		9		Timer		Sleep / Timer
	Input		AV / Input / RDS		Up		Up
	Audio		Audio / Lang I/II		Info		Info / Angle





Original	Rechange
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit / Return	 Back / Return
 Down	 Down
 Display	 Display / Media
 I<< / Page-	 I<< / Preset-
 ←	 Shift + Left
 →	 Shift + Right
 >>I / Page +	 >>I / Preset+
 << / <II / <I / Day-	 << / Tune-
 Play	 Play / Slow
 Day + / I> / II> / >>	 >> / Tune+
 TV Pause	 Shift + Pause / Step / Step /
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode

Original	Rechange
 Rec Stop	 Shift + Stop /
 DUB /HDD/DVD	 Shift + 8
 Rec Mode	 Shift + Rec / Rec Mode
 Zoom	 Zoom / Size
 Vol+ Tv	 Vol+
 Prog + Tv	 Shift + CH+ /
 Power Tv	 Shift + Power
 Play Mode	 Smart / List
 Vol - Tv	 Vol-
 Prog - Tv	 Shift + CH- /
 Input Tv	 Shift + AV / Input / RDS

