


 



 






 


 
 

 

 
 

 


 
 

 

 
 

 


 
 




 


 

 

 
 








 

 
 

 







Original		Rechange		Original		Rechange	
	Standby		Power		Red/Sound		Red
	1		1		Green/Picture		Green
	2		2		Yellow/VGA		Yellow
	3		3		Blue/TV		Blue
	4		4		[≡+]/Hold		Options
	5		5		[≡?]/Reveal		TV/R
	6		6		[≡◇]/Size		Format
	7		7		[/≡]		Smart
	8		8		[≡i]/Index		Shift + Info
	9		9		[O]/Subpage		Media
	0		0		[≡]/Text		Text
	P.P		Back		Vol+		Vol +
	FAV		Pre Ch		Vol-		Vol -
	DTV EPG		Guide		CH+		Ch +
	Input		AV		CH-		Ch -
	Mute		Mute		PIP		3D
	Audio		Dual		Wide		Eject





	Original	Recharge	Original	Recharge
	Info			
	Sleep			
	Menu			
	Exit			
	Menu DTV			
	Subtitle/Subtitle DTV			
	CH View/CHList			
	Up			
	Down			
	Right			
	Left			
	OK			

