

 
 
































 








 

 







 

 

 

 

 

 

 



 

 













Original	Rechange	Original	Rechange
 Power	 Power	 >>	 >> / Tune+
 Open/Close	 Eject / Surround	 >>	 >> / Preset+
 Function	 Smart / List	 Stop	 Stop / Hold
 1	 1	 Play	 Play / Slow
 2	 2	 Pause	 Pause / Step / Freeze
 3	 3	 Speaker Level	 TV/Radio /
 4	 4	 Vol+	 Vol+
 5	 5	 Optical Tv Sound	 Setup / OPT /
 6	 6	 Sound Effect	 Sound / Title
 7	 7	 Vol-	 Vol-
 8	 8	 Mute	 Mute / Dimmer
 9	 9	 Home	 Menu / Home
 Clear	 Exit / Cancel / Clear	 3D Sound	 Shift + Sound / Title
 0	 0	 Info/Menu	 Info / Angle
 Repeat	 Shift + Green / APP /	 Left/Tuning-	 Left
 I<<<	 I<<< / Preset-	 Up/Preset+	 Up
 <<<	 <<< / Tune-	 Right/Tuning+	 Right





Original	Recharge
 Enter	 OK
 Down/Preset-	 Down
 Back	 Back / Return
 Title/Pop Up	 Picture / Format
 Disc Menu	 D.Menu / Top
 Red/RDS	 Red / Netflix / Search
 Green/PTY	 Green / APP / Repeat
 Yellow/PTY Search	 Yellow / YouTube / Repeat
 Blue/Mono/Stereo	 Blue / Prime Video / Random
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Sleep	 Sleep / Timer
 *	 Display / Media
 Power Tv	 Shift + Power
 Volum+ Tv	 Shift + Vol+
 PR/CH+ Tv	 CH+ / Page+
 AV Input Tv	 AV / Input / RDS

Original	Recharge
 Volum- Tv	 Shift + Vol-
 PR/CH- Tv	 CH- / Page-

