


 





 







 



















 




 


 



 

 

 

 

 


 
 

 










Original		Rechange		Original		Rechange	
	Power		Power		Goto		Guide
	Eject		Eject		Zoom		Shift + Eject
	N / P		Media		Menu		Menu
	Video		Format		PBC		Smart
	Intro		Red		Setup		Options
	Default		Green		OSD		Info
	1		1		Up		Up
	2		2		Down		Down
	3		3		Right		Right
	4		4		Left		Left
	5		5		Enter		Ok
	6		6		Title		Blue
	7		7		L / R		TV/R
	8		8		Prog		Sleep
	9		9		Clear		Exit
	0		0		Mark		D. Menu
	10+		Pre Ch		<<		<<





	Original	Rechange	Original	Rechange
	>>		>>	
	Play / Pause		Play	
	Stop		Stop	
	<<		<<	
	>>		>>	
	Language		Dual	
	Angle		3D	
	Sub-T		Subt	
	Return		Back	
	Repeat		Text	
	A-B		Shift + Subt	
	Step		Pause	
	Slow		Shift + Play	
	Random		AV	
	Vol +		Vol +	
	Vol -		Vol -	
	Mute		Mute	

