

 




 



 


 





 

 
 
 
 
 

 
 
 







 








	Original	Rechange		Original	Rechange
STEP	Step		Power	ANGLE	Angle
SEARCH	Search		TV/R	AUDIO	Audio
MUTE	Mute		Mute	MENU/PBC	Menu PBC
SOURCE	Source		AV	TITLE	Title
1	1		1		Up
2	2		2	SETUP	Setup
3	3		3		Down
4	4		4		Right
5	5		5		Left
6	6		6	ENTER	Enter
7	7		7	VOL+	Vol+
8	8		8	VOL-	Vol-
9	9		9	MODE	Mode
0	0		0		Stop
10+	10+		Guide		Play
DISPLAY	Display		Info		Pause
SUBTITLE	Subtitle		Subt		>>
					Red
					Dual
					Menu
					List
					Options
					Ok
					Vol +
					Vol -
					Exit
					Home
					App
					CH -
					1
					2
					3
					4
					5
					6
					7
					8
					9
					GUIDE
					0
					PRE-CH
					A
					B
					C
					D



