





 
 

 




 





 
 






 





 
 
 

 
 







Original	Rechange
 Standby	 Power
 Mute	 Mute
 AV	 AV
 Tv/Rad	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu
 TXT	 Text
 Back	 Back

Original	Rechange
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Vol+	 Vol +
 Vol-	 Vol -
 Audio	 Dual
 Info	 Info
 Sub	 Subt
 List	 List
 CH+	 Ch +





Original		Rechange		Original	Rechange
	CH-		Ch -		
	APP		Media		
	EPG		Guide		
	I<<		I<<		
	<<		<<		
	>>		>>		
	>>I		>>I		
	Rec		Rec		
	Play		Play		
	Pause		Pause		
	Stop		Stop		
	File		Smart		

