


 







 
 




 

 

 
 


 






 



 
 



 


 




 




	Original	Rechange	Original	Rechange
	Power		Power	
	Up		Up	
	Down		Down	
	Right		Right	
	Left		Left	
	OK		Ok	
	M		Menu	
	[i]		Info	
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	0		0	
	-/--		Guide	
	PP		Back	
	P/CH+		Ch +	
	P/CH-		Ch -	
	P<P		Pre Ch	
	Vol+		Vol +	
	Vol-		Vol -	
	Mute		Mute	
	I-II		Dual	
	TV		TV/R	
	AV		AV	
	Red/Sound		Red	
	Green/Picture		Green	
	Yellow/Feature		Yellow	
	Blue/Install		Blue	
	[≡]		Text	





Original		Recharge		Original		Recharge	
	[≡o]		Smart				
	[≡+]		Format				
	[≡x]/[· ·]		3D				
	[/≡]/[*]		Subt				
	[≡◆]/[+]		Options				
	[≡?]/PC		Media				
	[≡i]		List				

