











 





Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol-
	1		1		OK		OK
	2		2		Down		Down
	3		3		P-		CH- / Page-
	4		4		i		Info / Angle
	5		5		Format / Picture		Picture / Format
	6		6		TXT		Text / Goto
	7		7		Mute		Mute / Dimmer
	8		8		Red/AKT		Red / Netflix / Search
	9		9		Green/Timer		Sleep / Timer
	0/AV		AV / Input / RDS		Green/Timer		Green / APP / Repeat
	0/AV		0		Yellow/[I I]		Yellow / YouTube / Repeat
	Up		Up		Blue/[++]		Blue / Prime Video / Random
	P+		CH+ / Page+		-O		<< / Tune-
	Right		Right		O+		>> / Tune+
	Vol+		Vol+		-*		I<< / Preset-
	Left		Left		*+		>>I / Preset+





Original		Rechange	
	PIP		Setup / OPT /
	IDTV-?		Smart / List
	P/C-ATS		Display / Media
	AUX	+	Shift + 7

Original		Rechange	















 












 



















Original	Recharge	Original	Recharge
 Power	 Power		
 P+	 CH+ / Page+		
 P-	 CH- / Page-		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 <	 Left		
 >	 Right		
 <<	 << / Tune-		
 >>	 >> / Tune+		





Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol-
	1		1		OK		OK
	2		2		P-		CH- / Page-
	3		3		Down		Down
	4		4		i		Info / Angle
	5		5		Format / Picture		Picture / Format
	6		6		TXT		Text / Goto
	7		7		Mute		Mute / Dimmer
	8		8		Red/AKT		Red / Netflix / Search
	9		9		Green/Timer		Green / APP / Repeat
	0/AV		AV / Input / RDS		Green/Timer		Sleep / Timer
	0/AV		0		Yellow/[I]		Yellow / YouTube / Repeat
	P+		CH+ / Page+		Blue/[++]		Blue / Prime Video / Random
	Up		Up		-O		<< / Tune-
	Right		Right		O+		>> / Tune+
	Vol+		Vol+		-*		I<< / Preset-
	Left		Left		*+		>>I / Preset+





Original		Recharge		Original		Recharge	
	PIR		Setup / OPT /				
	IDTV-?		Smart / List				
	P/C-ATS		Display / Media				
	AUX		+	Shift +			

