


 

 



 


 
 







 




 


 


 



 
 


 



 

 

 



 

 











 




Original		Rechange		Original		Rechange	
	Power		Power		Sleep		Sleep
	Mute		Mute		CH +		Ch +
	1		1		CH -		Ch -
	2		2		Menu		Menu
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		Ok
	8		8		Exit		Exit
	9		9		Mode		Media
	0		0		TV / Radio		TV/R
	Info		Info		Freeze		Pause
	Back		Back		Subtitle		Subt
	Vol +		Vol +		Text		Text
	Vol -		Vol -		P.Mode		Shift + Format
	Nicam / A2		3D		S.Mode		Dual





Original		Recharge		Original		Recharge	
	Mix		Smart				
	Hold		Stop				
	Index		+	Shift + Info			
	Subpage		AV				
	Reveal		D. Menu				
	Red		Red				
	Green		Green				
	Size		Format				
	Yellow		Yellow				
	Blue		Blue				
	Zoom		Eject				
	Fav-CH		Pre Ch				
	EPG		Guide				
	CH List		List				

