



Original	Rechange
 Standby	 Power
 Source	 AV
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 P Mode	 Format
 S Mode	 Dual
 Freeze	 Smart
 TXT	 Text
 Mix / Fav List	 Pre Ch
 Size / Subtitle	 Subt
 Cancel / Audio	 Shift + Dual
 Record	 Rec
 << / Index	 <<
 >> / Hold	 >>
 I<< / Reveal	 I<<

Original	Rechange
 >>I / Subpage	 >>I
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Play/Pause / Timeshift	 Play
 Play/Pause / Timeshift	 Pause
 Stop / EPG	 Stop
 Stop / EPG	 Guide
 Vol +	 Vol +
 Vol -	 Vol -
 Mute	 Mute
 TV / Radio	 TV/R
 CH +	 Ch +





Original		Recharge	
CH ↓	CH -	CH -	Ch -
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
DISPLAY □	Display	DISPLAY INFO	Info
RECALL ↺	Recall	RETURN BACK	Back

Original		Recharge	

