






 
 

Original	Recharge
 Power	 Power
 Source	 AV
 blank	 TV/R
 [> <]	 Options
 square	 D. Menu
 Red / Rec / Movie	 Red
 Red / Rec / Movie	 Rec
 Green / << /	 Green
 Green / << /	 <<
 Yellow / Stop / Child	 Yellow
 Yellow / Stop / Child	 Stop
 Blue / Play / News	 Blue
 Blue / Play / News	 Play
 >> / Other	 >>
 Guide	 Guide
 Text	 Text
 Up	 Up

Original	Recharge
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Menu	 Menu
 V +	 Vol +
 V -	 Vol -
 Mute	 Mute
 P +	 Ch +
 P -	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7





 





 

 


 
 
 
 
 
 



 

 
 

 












 
 



 



 

 

 


 


 
 
 

 
 
 


Original	Recharge
	 8
	 9
	 0
	 Info
	 Pre Ch
	 Shift + Media
	 Smart
	 Media
	 3D
	 Subt
	 Exit
	 Sleep
	 Shift + AV
	 Back
	 Eject
	 Dual
	 Shift + Rec

Original	Recharge
	 Format
	 List
	 Shift + Stop





Original	Recharge	Original	Recharge
	Power		Power
	Rec		Rec
	<<		<<
	<<		I<<
	Stop		Stop
	Play		Play
	>>		>>
	>>		>>I
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Text		Text
	Menu		Menu
	P +		Ch +
	P -		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	i+		Info
	P < P / -/--		Pre Ch
	Timer		AV
	[?]		D. Menu
	Zoom		Eject
	I / II		Dual

