



 



















 



 
 




 
 

 




 
 


 

 
 






	Original	Rechange		Original	Rechange
	Step		Power		Angle
	Search		TV/R		Audio
	Mute		Mute		Menu PBC
	Source		AV		Title
	1		1		Mode
	2		2		Setup
	3		3		Vol+
	4		4		Vol-
	5		5		Repeat
	6		6		Slow
	7		7		Program
	8		8		Zoom
	9		9		Up
	0		0		Down
	10+		Guide		Right
	Display		Info		Left
	Subtitle		Subt		Enter
					Ok



