



Original	Recharge
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Text	Text / Goto
0	0
Recall	Back / Return
Imagen	Picture / Format
Sonido	Sound / Title
Audio	Audio / Lang I/II

Original	Recharge
Sleep	Sleep / Timer
Fuente	Shift + Subtitle / EQ
P+	CH+ / Page+
Vol+	Vol+
Info	Info / Angle
P-	CH- / Page-
Vol-	Vol-
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Up	Up
Left	Left
OK	OK
Right	Right
Menu	Menu / Home
Down	Down





Original	Recharge
SALIR	Exit / Cancel / Clear
Subtitulo	Subtitle / EQ
Indice	D.Menu / Top
Tamaño	Zoom / Size
Mostrar	AV / Input / RDS
Mezclar	Setup / OPT /
Play	Play / Slow
Pause/Congelar	Pause / Step / Freeze
I<</Cancelar	I<< / Preset-
>>I/Subpag	>>I / Preset+
Guía	Shift + Menu /
FAV	Fav / Marker / PC
Stop	Stop / Hold
<</FAV-	<< / Tune-
>>/FAV+	>> / Tune+
USB	Shift + 8
Grabar	Rec / Rec Mode

Original	Recharge
Timeshift	Shift + Sleep / Timer
Tv/Radio	TV/Radio /

