











 

 
 

 




















| Original                                                                                   | Recharge                                                                                              |
|--------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
|  Power    |  Power               |
|  Mute     |  Mute / Dimmer       |
|  1        |  1                   |
|  2        |  2                   |
|  3        |  3                   |
|  4        |  4                   |
|  5        |  5                   |
|  6        |  6                   |
|  7        |  7                   |
|  8       |  8                  |
|  9      |  9                 |
|  Text   |  Text / Goto       |
|  0      |  0                 |
|  Recall |  Back / Return     |
|  Imagen |  Picture / Format  |
|  Sonido |  Sound / Title     |
|  Audio  |  Audio / Lang I/II |

| Original                                                                                    | Recharge                                                                                                          |
|---------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
|  Sleep   |  Sleep / Timer                 |
|  Fuente  |  Shift + Subtitle / EQ         |
|  P+      |  CH+ / Page+                   |
|  Vol+    |  Vol+                          |
|  Info    |  Info / Angle                  |
|  P-      |  CH- / Page-                   |
|  Vol-    |  Vol-                          |
|  Red     |  Red / Netflix / Search        |
|  Green   |  Green / APP / Repeat          |
|  Yellow |  Yellow / YouTube / Repeat    |
|  Blue  |  Blue / Prime Video / Random |
|  Up    |  Up                          |
|  Left  |  Left                        |
|  OK    |  OK                          |
|  Right |  Right                       |
|  Menu  |  Menu / Home                 |
|  Down  |  Down                        |





| Original       | Recharge              |
|----------------|-----------------------|
| Salir          | Exit / Cancel / Clear |
| Subtitulo      | Subtitle / EQ         |
| Indice         | D.Menu / Top          |
| Tamaño         | Zoom / Size           |
| Mostrar        | AV / Input / RDS      |
| Mezclar        | Setup / OPT /         |
| Play           | Play / Slow           |
| Pause/Congelar | Pause / Step / Freeze |
| I<</Cancelar   | I<< / Preset-         |
| >>I/Subpag     | >>I / Preset+         |
| Guía           | Shift + Menu /        |
| FAV            | Fav / Marker / PC     |
| Stop           | Stop / Hold           |
| <</FAV-        | << / Tune-            |
| >>/FAV+        | >> / Tune+            |
| USB            | Shift + 8             |
| Grabar         | Rec / Rec Mode        |

| Original  | Recharge              |
|-----------|-----------------------|
| Timeshift | Shift + Sleep / Timer |
| Tv/Radio  | TV/Radio /            |

