 







 







 







 






 































 








Original	Rechange	Original	Rechange
 Power	 Power	 -/--	 Shift + Guide / EPG / -/--
 Mute	 Mute / Dimmer	 Jump	 Smart / List
 Source	 AV / Input / RDS	 Menu	 Menu / Home
 P.Mode	 Picture / Format	 Info	 Info / Angle
 S.Mode	 Sound / Title	 Sleep	 Sleep / Timer
 I/II/Audio	 Audio / Lang I/II	 Exit	 Exit / Cancel / Clear
 P.Size	 Zoom / Size	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 Enter	 OK
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Vol+	 Vol+
 6	 6	 Vol-	 Vol-
 7	 7	 P-	 CH- / Page-
 8	 8	 P+	 CH+ / Page+
 9	 9	 Red/D.Setup	 Red / Netflix / Search
 0	 0	 Red/D.Setup	 Setup / OPT /





Original	Recharge
REPEAT Green/Repeat	APP Green / APP / Repeat
ZOOM Yellow/Zoom	YouTube Yellow / YouTube / Repeat
ZOOM Yellow/Zoom	SHIFT + SIZE Shift + Zoom /
GOTO Blue/Goto	Prime Video Blue / Prime Video / Random
GOTO Blue/Goto	SHIFT + GOTO Shift + Text /
FAV.CH [≡i]/FAV.CH	PC FAV MARKER Fav / Marker / PC
FREEZE [≡?]/Freeze	SHIFT + STEP-FREEZE Shift + Pause / Step /
USB/SD [≡♦]/USB/SD	SHIFT + 8 Shift + 8
TV/RADIO [≡+]/Tv/Radio	PROGRAM TV/RADIO TV/Radio /
REC Rec	REC MODE Rec / Rec Mode
Stop Stop	HOLD Stop / Hold
Open/Close	SURROUND Eject / Surround
Play Play	SLOW Play / Slow
Pause Pause	STEP-FREEZE Pause / Step / Freeze
<< <<	TUNE- << / Tune-
>> >>	TUNE+ >> / Tune+
I<< I<<	PRESET- I<< / Preset-

Original	Recharge
>>I	PRESET+ >>I / Preset+
DVD Menu	TOP MENU D.Menu / Top
Text	GOTO Text / Goto
Subtitle	EQ Subtitle / EQ
Guide	GUIDE EPG Guide / EPG / -/-

