





 



 



 



 

 



 

 

 



 

 

 

 

 

 

 

 

 

 



 

 

 













| Original | Rechange |
|------------------|-------------------|
| Standby | Power |
| 1/VCR/DVR | 1 |
| 2/CBL/SAT | 2 |
| 3/Game/TV | 3 |
| 4/AUX | 4 |
| 5/Multi CH | 5 |
| 6/DVD | 6 |
| 7/Tape | 7 |
| 8/Tuner | 8 |
| 9/CD | 9 |
| +10/10/-/-/D.Tun | Guide / EPG / -/- |
| 0/11/Dimmer | 0 |
| CLR/12/Sleep/Ent | Fav / Marker / PC |
| CH Disc | CH+ / Page+ |
| CH Disc Album- | CH- / Page- |
| Vol+ | Vol+ |
| Vol- | Vol- |

| Original | Rechange |
|----------------------|-----------------------|
| Up | Up |
| Previous Menu/Muting | Menu / Home |
| Left/Playlist/Cat | Left |
| Enter | OK |
| Right/Playlist/Cat | Right |
| Setup | Setup / OPT / |
| Down | Down |
| Return | Back / Return |
| Pause/< | Pause / Step / Freeze |
| Play | Play / Slow |
| Stop | Stop / Hold |
| << / Tune- | << / Tune- |
| >> / Tune+ | >> / Tune+ |
| Stereo | Sound / Title |
| Surround | Eject / Surround |
| < Listening Mode | Shift + Left |
| Listening Mode > | Shift + Right |





| Original | Rechange | Original | Rechange |
|--|---|--|---|
|  Standby |  Power |  Enter |  OK |
|  1/VCR/DVR |  1 |  Right/Playlist/Cat |  Right |
|  2/CBL/SAT |  2 |  Setup |  Setup / OPT / |
|  3/Game/TV |  3 |  Down |  Down |
|  4/AUX |  4 |  Return |  Back / Return |
|  5/Multi CH |  5 |  Pause/< |  Pause / Step / Freeze |
|  6/DVD |  6 |  Play |  Play / Slow |
|  7/Tape |  7 |  Stop |  Stop / Hold |
|  8/Tuner |  8 |  << |  << / Tune- |
|  9/CD |  9 |  >> |  >> / Tune+ |
|  +10/10/-/-/D.Tun |  Guide / EPG / -/- |  << |  << / Preset- |
|  0/11/Dimmer |  0 |  >> |  >> / Preset+ |
|  CLR/12/Sleep/Ent |  Fav / Marker / PC |  Stereo |  Sound / Title |
|  Guide/Top |  D.Menu / Top |  Surround |  Eject / Surround |
|  Up |  Up |  < Listening Mode |  CH- / Page- |
|  Previous Menu/Muting |  Menu / Home |  Listening Mode > |  CH+ / Page+ |
|  Left/Playlist/Cat |  Left |  Test Tone/Audio |  Audio / Lang I/II |





| Original | Rechange |
|------------------|-------------------|
| Standby | Power |
| 1/VCR/DVR | 1 |
| 2/CBL/SAT | 2 |
| 3/Game/TV | 3 |
| 4/AUX | 4 |
| 5/Multi CH | 5 |
| 6/DVD | 6 |
| 7/Tape | 7 |
| 8/Tuner | 8 |
| 9/CD | 9 |
| +10/10/-/-/D.Tun | Guide / EPG / -/- |
| 0/11/Dimmer | 0 |
| CLR/12/Sleep/Ent | Fav / Marker / PC |
| Disc/Album | CH+ / Page+ |
| Disc/Album CH- | CH- / Page- |
| Vol+ | Vol+ |
| Vol- | Vol- |

| Original | Rechange |
|------------------|-----------------------------|
| Pause/< | Pause / Step / Freeze |
| Play | Play / Slow |
| Stop | Stop / Hold |
| << | << / Tune- |
| >> | >> / Tune+ |
| << | << / Preset- |
| >> | >> / Preset+ |
| Stereo | Audio / Lang I/II |
| Surround | Eject / Surround |
| < Listening Mode | Left |
| Listening Mode > | Right |
| Level-/Random | Blue / Prime Video / Random |
| Level+/Repeat | Green / APP / Repeat |
| Display | Display / Media |





| Original | | Rechange | | Original | | Rechange | |
|----------|------------------|----------|-----------------------|----------|------------------|----------|-------------------|
| | Standby | | Power | | << | | << / Tune- |
| | 1/VCR/DVR | | 1 | | Stereo | | Audio / Lang I/II |
| | 2/CBL/SAT | | 2 | | Surround | | Eject / Surround |
| | 3/Game/TV | | 3 | | < Listening Mode | | Left |
| | 4/AUX | | 4 | | Listening Mode > | | Right |
| | 5/Multi CH | | 5 | | Play Mode/VCR | | OK |
| | 6/DVD | | 6 | | L.Night/DVD | | Sleep / Timer |
| | 7/Tape | | 7 | | | | |
| | 8/Tuner | | 8 | | | | |
| | 9/CD | | 9 | | | | |
| | +10/10/-/-/D.Tun | | Guide / EPG / -/- | | | | |
| | 0/11/Dimmer | | 0 | | | | |
| | Disc/Album | | CH+ / Page+ | | | | |
| | Disc/Album CH- | | CH- / Page- | | | | |
| | Pause/< | | Pause / Step / Freeze | | | | |
| | Play | | Play / Slow | | | | |
| | Stop | | Stop / Hold | | | | |

