






 

 










 




 




 

 

 




Original	Rechange
 Standby	 Power
 Tv/Radio	 TV/R
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Goto	 Smart
 Favourite	 Pre Ch
 Menu	 Menu
 Info	 Info

Original	Rechange
 Recall	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 EPG	 Guide
 Subtitle	 Subt
 Audio	 Dual
 TTX	 Text
 <<	 <<
 >>	 >>





	Original	Rechange	Original	Rechange
	I<<			I<<
	>>I			>>I
	Play			Play
	Pause			Pause
	Stop			Stop
	Rec			Rec
	Repeat			Shift + Text
	Page+			Shift + Ch +
	Page-			Shift + Ch -
	PVR			Media
	Red/USB			Red
	Green/V-Format			Green
	Yellow/Aspect			Yellow
	Blue/Timer			Blue

