



 





Original		Rechange		Original		Rechange	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	1		1		Up		Up
	2		2		Left		Left
	3		3		Enter		OK
	4		4		Right		Right
	5		5		Down		Down
	6		6		Exit		Exit / Cancel / Clear
	7		7		Display		Display / Media
	8		8		Vol+		Vol+
	9		9		MTS		Shift + Smart / List
	DTV/ATV		Shift + AV / Input / RDS		CH+		CH+ / Page+
	0		0		Vol-		Vol-
	Recall		Back / Return		Rec List/D.Setup		Setup / OPT /
	P.Mode		Picture / Format		Rec List/D.Setup		Smart / List
	S.Mode		Sound / Title		CH-		CH- / Page-
	Sleep		Sleep / Timer		Rec		Rec / Rec Mode





Original		Rechange		Original		Rechange		
	Open/Close		Eject / Surround		D.Menu/Reveal		D.Menu / Top	
	Play		Play / Slow		Size/D.Title		+	Shift + Sound / Title
	Pause/Timeshift		Pause / Step / Freeze		Size/D.Title		+	Shift + Zoom /
	Stop/Freeze		Stop / Hold		Goto/Hold		+	Shift + Stop /
	<<		<< / Tune-		Goto/Hold		+	Shift + Text /
	Guide		Guide / EPG / -/--		Text/D.Display		+	Shift + Display / Media
	>>		>> / Tune+		Text/D.Display		TEXT	Text / Goto
	Aspect		+		Red/Prog		+	Shift + TV/Radio / Program
	I<<		I<< / Preset-		Red/Prog			Red / Netflix / Search
	Tv/Radio		TV/Radio /		Green/Step		+	Shift + Pause / Step /
	>>I		>>I / Preset+		Green/Step			Green / APP / Repeat
	FAV List		Fav / Marker / PC		Yellow/Repeat			Yellow / YouTube / Repeat
	Zoom/Index		Zoom / Size		Yellow/Repeat		+	Shift + Green / APP /
	Angle/Cancel		+		Cyan/A-B			Blue / Prime Video / Random
	Angle/Cancel		Info / Angle		Cyan/A-B		+	Shift + Yellow / YouTube /
	Audio/Subpage		Audio / Lang I/II					
	Subtitle		Subtitle / EQ					

