



 



























 

 

 



































Original		Rechange		Original		Rechange	
	Power		Power		Up		Up
	EPG		Guide / EPG / -/--		Display		Display / Media
	REP		TV/Radio /		Left		Left
	Mute		Mute / Dimmer		OK		OK
	Rec List		Shift + Rec / Rec Mode		Right		Right
	CH List		Smart / List		Menu		Menu / Home
	Subtitle		Subtitle / EQ		Down		Down
	Eject		Eject / Surround		Exit		Exit / Cancel / Clear
	Rec		Rec / Rec Mode		1		1
	Stop		Stop / Hold		2		2
	I<<		I<< / Preset-		3		3
	>>I		>>I / Preset+		4		4
	Pause		Pause / Step / Freeze		5		5
	Play		Play / Slow		6		6
	<<		<< / Tune-		7		7
	>>		>> / Tune+		8		8
	Source		AV / Input / RDS		9		9





Original	Rechange
 0	 0
 Recall	 Back / Return
 Fav	 Fav / Marker / PC
 Vol +	 Vol+
 Picture	 Picture / Format
 Nicam / A2	 Audio / Lang I/II
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Sound	 Sound / Title
 Sleep	 Sleep / Timer
 CH -	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue / Screen	 Blue / Prime Video / Random
 Setup / TV/Txt	 Setup / OPT /
 D-Menu /	 D.Menu / Top

Original	Rechange
 Title / Reveal	 Shift + Sound / Title
 PRO	 Shift + Display / Media
 LAN / Hold	 Shift + Smart / List
 Size / A-B	 Zoom / Size
 Goto / Subpage	 Text / Goto
 Index / Slow	 Info / Angle



Cancel Menu