












 

 
 

 




 



 



 


 








 



 
 


 
 

 
 






 


 




Original		Rechange		Original		Rechange	
	Power		Power		Title/PgUp		Ch +
	Eject		Eject		Prog/PgDn		Ch -
	1		1		Zoom/EPG		Guide
	2		2		SUB-T		Subt
	3		3		TTX		Text
	4		4		PBC/Menu		Menu
	5		5		Audio		Dual
	6		6		Display/Info		Info
	7		7		Exit		Exit
	8		8		Up/CH+		Up
	9		9		Down/CH-		Down
	0		0		Right		Right
	DVD/DVB		Smart		Left		Left
	Tv/Radio		TV/R		OK		Ok
	Digest		Format		Vol+		Vol +
	Angle/FAV		Pre Ch		Vol-		Vol -
	A-B/Return		Back		Goto/List		List





Original	Recharge	Original	Recharge
 Rec	 Rec		
 Stop	 Stop		
 Play	 Play		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		
 I<<	 I<<		
 >>I	 >>I		
 Red/Slow	 Red		
 Green/Step	 Green		
 Yellow/Repeat	 Yellow		
 Blue/Direct	 Blue		
 Setup	 Options		
 USB	 AV		
 Mute	 Mute		
 Video	 3D		

