






 




 





 


 


 
 





 



 



 



 


 
 

 



 
 
 

 



 
 


 
 





Original		Rechange		Original		Rechange	
	Standby		Power		Menu		Menu
	Mute		Mute		Exit		Exit
	ATV		Smart		Up		Up
	Tv/Radio		TV/R		Down		Down
	Tv Guide		Guide		Right		Right
	USB		Media		Left		Left
	Rec		Rec		OK		Ok
	I<<		I<<		1		1
	>>I		>>I		2		2
	Stop		Stop		3		3
	<<		<<		4		4
	>>		>>		5		5
	Play		Play		6		6
	Pause		Pause		7		7
	Rec List		List		8		8
	AV/Source		AV		9		9
	i/Info		Info		0		0



