







 
 







 
 


 
 

 
 
 

 



 
 


 
 

 

 






 
 
 




 
















Original		Rechange		Original		Rechange	
	Power		Power		Mute		Mute
	Netflix		Media		[i]		Info
	TV		TV/R		P+		Ch +
	1		1		P-		Ch -
	2		2		*		Menu
	3		3		Home		Smart
	4		4		Guide		Guide
	5		5		≡		Options
	6		6		Back		Back
	7		7		Up		Up
	8		8		Down		Down
	9		9		Right		Right
	0		0		Left		Left
	Eco		3D		OK		Ok
	Source		AV		Exit		Exit
	Vol+		Vol +		Zoom+		Shift + Ch +
	Vol-		Vol -		Zoom-		Shift + Ch -



