



Original		Rechange		Original		Rechange	
<<		<< / Tune-		8	8		8
>>		>> / Tune+		9	9		9
I<<		I<< / Preset-			[≡?]/Source		Eject / Surround
>>I		>>I / Preset+		0	0		0
Play		Play / Slow			O)/I/II/Audio		Audio / Lang I/II
Pause		Pause / Step / Freeze			Menu		Menu / Home
Stop		Stop / Hold			Exit		Exit / Cancel / Clear
	Power		Power		Up		Up
	[≡i]/Info		Info / Angle		Left		Left
	Mute		Mute / Dimmer		Enter		OK
1	1		1		Right		Right
2	2		2		Down		Down
3	3		3		CH+		CH+ / Page+
4	4		4		Index		Display / Media
5	5		5		Vol+		Vol+
6	6		6		CH-		CH- / Page-
7	7		7		List		Smart / List





Original		Recharge	
VOL-	Vol-	VOL -	Vol-
♥	♥	PC FAV MARKER	Fav / Marker / PC
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
EPG	EPG	GUIDE EPG	Guide / EPG / -/--
↺	Recall	RETURN BACK	Back / Return
[Red]	Red	NETFLIX SEARCH	Red / Netflix / Search
[Green]	Green	APP REPEAT	Green / APP / Repeat
[Yellow]	Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
[Blue]	Blue	Prime Video RANDOM	Blue / Prime Video / Random
[List Icon]	[≡]	GOTO TEXT	Text / Goto
[Still Icon]	[≡+]/Still	SIZE ZOOM	Zoom / Size
RADIO	Radio	PROGRAM TV/RADIO	TV/Radio /
[List Icon]	[≡♦]/[++]	FORMAT PICTURE	Picture / Format
[List Icon]	[≡x]	OPT-TOOLS SETUP	Setup / OPT /
SUBTITLE	[≡o]/Subtitle	EQ SUBTITLE	Subtitle / EQ
DMP	DMP	TOP MENU D.MENU	D.Menu / Top
[Red]	Rec	REC MODE	Rec / Rec Mode

Original		Recharge	

