

 



 































 








 



 




















Original		Rechange		Original		Rechange	
	Power		Power		Menu		Menu / Home
	Mute		Mute / Dimmer		Exit		Exit / Cancel / Clear
	Nicam/A2		Shift + Audio / Lang I/II		1		1
	Sleep		Sleep / Timer		2		2
	Aspect		Shift + Picture / Format		3		3
	Media		Shift + Display / Media		4		4
	Display		Display / Media		5		5
	Auto		Smart / List		6		6
	P.Mode		Picture / Format		7		7
	S.Mode		Sound / Title		8		8
	DTV		D.Menu / Top		9		9
	Source		AV / Input / RDS		0		0
	Up		Up		-/--		Shift + Guide / EPG / -/--
	Left		Left		Recall		Back / Return
	Enter		OK		CH+		CH+ / Page+
	Right		Right		Info		Info / Angle
	Down		Down		Audio		Audio / Lang I/II





Original	Recharge	Original	Recharge
 Vol+	 Vol+	 Stop	 Stop / Hold
 CH-	 CH- / Page-	 Rec/Repeat	 Rec / Rec Mode
 FAV	 Fav / Marker / PC	 Rec/Repeat	 Shift + Green / APP / REPEAT
 Tv/Radio	 TV/Radio /	 T-Shift	 Eject / Surround
 Vol-	 Vol-	 Red	 Red / Netflix / Search
 Text	 Text / Goto	 Green	 Green / APP / Repeat
 EPG	 Guide / EPG / -/--	 Yellow	 Yellow / YouTube / Repeat
 Subtitle	 Subtitle / EQ	 Cyan	 Blue / Prime Video / Random
 Index	 Setup / OPT /		
 <</Hold	 << / Tune-		
 <</Hold	 Shift + Stop /		
 Size	 Zoom / Size		
 >>	 >> / Tune+		
 I<</Reveal	 I<< / Preset-		
 >>I/Subpage	 >>I / Preset+		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		

