




 

 

 



 



 



 



 



 







 



 







 






 
 



 

 








Original	Recharge	Original	Recharge
 Power	 Power	 Blue/Picture	 Blue
 Mute	 Mute	 O/I/I	 Dual
 1	 1	 Menu	 Menu
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 [≡]	 Text
 8	 8	 Back	 Back
 9	 9	 P+	 Ch +
 0	 0	 P-	 Ch -
 i	 Info	 Vol+	 Vol +
 AV	 AV	 Vol-	 Vol -
 Red/Zoom	 Red	 ^/[+]	 Format
 Green/(↔)	 Green	 Play/[?]	 Play
 Yellow/Timer	 Yellow	 >>/[◆]	 >>






 



 



 

 


 
 



 









 

 



 

 

 

 

 









 

 



 








	Original	Recharge	Original	Recharge
	~/Timer	 Options		
	Stop/[X]	 Stop		
	Pause/[≡i]	 Pause		
	[■]	 Subt		
	[←■]	 TV/R		
	[↕■]	 3D		
	♪	 +  Shift + Dual		






 

 

 




 

 





Original		Rechange		Original		Rechange	
	Power		Power		P-		Ch -
	Mute		Mute		Vol+		Vol +
	1		1		Vol-		Vol -
	2		2		Red/Zoom		Red
	3		3		Green/(↔)		Green
	4		4		Yellow/Timer		Yellow
	5		5		Blue/Picture		Blue
	6		6		<<		<<
	7		7		>>/[◆]		>>
	8		8		^[+]		Format
	9		9		~/Timer		Options
	0		0		Rec/Top Menu		Rec
	AV		AV		Play/[?]		Play
	i		Info		Stop/[X]		Stop
	O)/I/II		Dual		Pause/[≡i]		Pause
	[≡]		Text		[■]		Subt
	P+		Ch +		[←■]		TV/R



 


 



 



 



 



 



 



 







 



 







 





 

 


 
 



 






Original		Recharge		Original		Recharge	
	[↕■]		3D				
	♪		Shift + Dual				
	Menu		Menu				
	Back		Back				
	OK		Ok				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				




 

 






 


 




Original	Recharge	Original	Recharge
 Power	 Power	 Green/(↔)	 Green
 Mute	 Mute	 Yellow/Timer	 Yellow
 1	 1	 Blue/Picture	 Blue
 2	 2	 OK	 Ok
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 P+	 Ch +
 8	 8	 P-	 Ch -
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 i	 DISPLAY INFO	 <<	 <<
 AV	 TIMER AV	 Play/[?]	 Play
 O/I/II	 SOUND DUAL	 >>/[♦]	 >>
 Menu	 TOP MENU MENU	 Stop/[X]	 Stop
 Red/Zoom	 A	 Pause/[≡i]	 Pause





Original	Recharge	Original	Recharge
 ^/[+]	 Format		
 √/Timer	 Options		
 [■]	 Subt		
 [←■]	 TV/R		
 [↓■]	 3D		
 ♪	 Shift + Dual		
 Back	 Back		
 [≡]	 Text		

