



Original	Recharge
Power	Power
D/A Input	Smart
Tv/Radio	TV/R
Input	AV
Bright+	Shift + Right
Bright-	Shift + Left
Simplink	Media
Text	Text
Ratio	Format
I/II	Dual
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Stop	Stop
Play	Play
Pause	Pause

Original	Recharge
Rec	Rec
I<<	I<<
<<	<<
>>	>>
>>	>>
Exit	Exit
Back	Back
Menu	Menu
Info	Info
Guide	Guide
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
Vol+	Vol +
Vol-	Vol -












 

 

 

















 

 

 

 



 



 


Original	Recharge	Original	Recharge
MUTE	Mute	MUTE	Mute
FAV	FAV	FAV	Pre Ch
PR+	Ch +	PR+	Ch +
PR-	Ch -	PR-	Ch -
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
LIST	List	LIST	List
Q.View	Options	Q.View	Options
UPDATE	Shift + TV/R	UPDATE	Shift + TV/R

Original	Recharge	Original	Recharge
INDEX	D. Menu	INDEX	D. Menu
TIME	Shift + Exit	TIME	Shift + Exit
SLEEP	Sleep	SLEEP	Sleep
HOLD	3D	HOLD	3D
REVEAL	Eject	REVEAL	Eject
SUBTITLE	Subt	SUBTITLE	Subt






 




 



 











 

 

 

 


 




Original		Rechange		Original		Rechange	
	Power		Power		4		4
	Stop		Stop		5		5
	Play		Play		6		6
	Pause		Pause		7		7
	I<<		I<<		8		8
	>>		>>		9		9
	>>I		>>I		0		0
	Menu		Menu				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	OK		Ok				
	1		1				
	2		2				
	3		3				





	Original	Recharge	Original	Recharge
	Power			8
	Input			9
	Stop			0
	Play			
	Pause			
	Rec			
	<<			
	>>			
	PR+			
	PR-			
	1			
	2			
	3			
	4			
	5			
	6			
	7	