




















 






 











 




 







 





Original	Recharge
 Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Vol+	 Vol+
 Vol-	 Vol-
 Left	 Left
 Right	 Right
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

Original	Recharge
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 Play/Pause	 Pause / Step / Freeze
 I>/Resume	 Shift + Play /
 Surround	 Eject / Surround
 Sound	 Sound / Title
 Night	 Shift + Sleep / Timer
 Mute	 Mute / Dimmer
 Repeat	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat
 Sleep	 Sleep / Timer
 DIM	 Shift + Mute / Dimmer
 Subw +	 Up
 Rear +	 Shift + CH+ /
 Center +	 CH+ / Page+
 Tv Vol+	 Shift + Vol+
 Subw -	 Down





	Original	Recharge	
	Rear -	 Shift + CH- /	
	Center -	 CH- / Page-	
	Tv Vol-	 Shift + Vol-	

	Original	Recharge	







 

 







 

 

 

 

 







 



Original	Recharge
Standby	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Disc (DVD)	D.Menu / Top
0	0
Vol+	Vol+
System (DVD)	Menu / Home
Vol-	Vol-
I<<	I<< / Preset-
>>I	>>I / Preset+

Original	Recharge
Stop	Stop / Hold
Play/Pause	Play / Slow
I>/Resume	Shift + Play /





Original		Rechange		Original		Rechange	
	Standby		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Up		Up				
	Left		Left				
	OK		OK				
	Right		Right				
	Down		Down				





Original	Recharge	Original	Recharge
Standby	Power		
1	1		
2	2		
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
0	0		

