






Original	Rechange
 Power	 Power
 DVD	 Media
 VCR	 Smart
 TV	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Go Back/Return	 Back
 >>I	 >>I
 I<<	 I<<
 Clear	 Exit
 Menu/i	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok

Original	Rechange
 Red/(·)/Lock	 Red
 Green/Timer/[...]	 Green
 Yellow/Info	 Yellow
 Blue/Guide	 Blue
 Violet/Camera	 Pre Ch
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV	 AV
 Play Mode	 Shift + Play






 

 

 
 


 
 

 

 


 
 


 



 






Original		Recharge	
	<<		<<
	Play		Play
	>>		>>
	Record		Rec
	Stop		Stop
	Pause		Pause
	Again/SP/LP		Options
	Zoom/Index		Info
	Open/Close		Eject

Original		Recharge	





Original	Recharge
 Power	 Power
 DVD	 Media
 VCR	 Smart
 TV	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Go Back/Return	 Back
 PR+	 Ch +
 PR-	 Ch -
 Clear	 Exit
 Menu/i	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok

Original	Recharge
 Red/(·)/Lock	 Red
 Green/Timer/[...]	 Green
 Yellow/Info	 Yellow
 Blue/Guide	 Blue
 Violet/Camera	 Pre Ch
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV	 AV
 Play Mode	 Shift + Play





Original		Rechange	
	<<		<<
	Play		Play
	>>		>>
	Record		Rec
	Stop		Stop
	Pause		Pause
	Again/SP/LP		Options
	Zoom/Index		Info
	Open/Close		Eject

Original		Rechange	

 










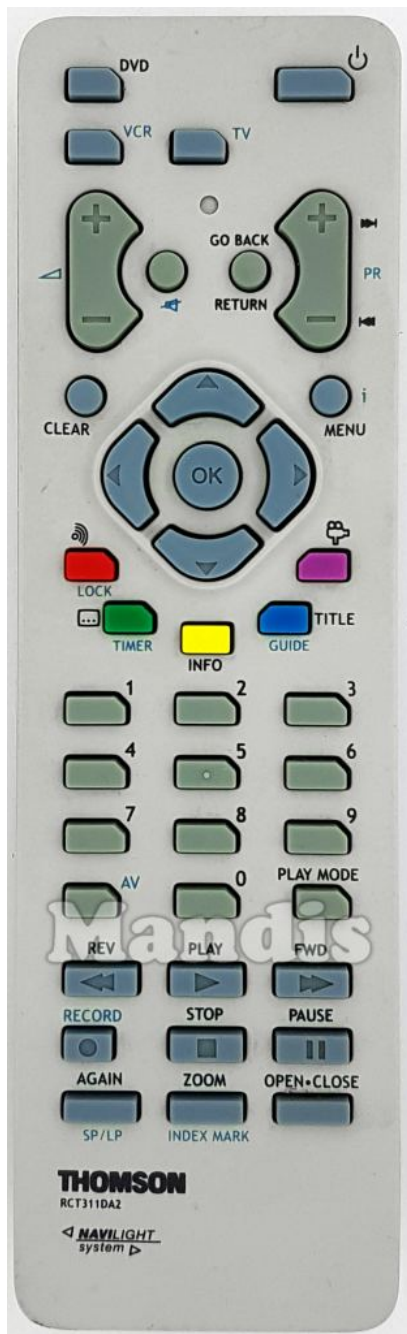



Original	Recharge
Power	Power
DVD	Media
VCR	Smart
TV	TV/R
Vol+	Vol +
Vol-	Vol -
Mute	Mute
Go Back/Return	Back
PR+	Ch +
PR-	Ch -
Clear	Exit
Menu/i	Menu
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok

Original	Recharge
Red/(·)/Lock	Red
Green/Timer/[...]	Green
Yellow/Info	Yellow
Blue/Guide	Blue
Violet/Camera	Pre Ch
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
AV	AV
<<	<<





Original	Recharge	Original	Recharge
 Play	 Play		
 >>	 >>		
 Record	 Rec		
 Stop	 Stop		
 Pause	 Pause		

Original	Recharge

