



Original		Rechange		Original		Rechange	
	Power		Power		Remain		Guide
	DVD		Shift + 1		Cancel		Exit
	Tuner		Shift + 2		<<		<<
	Aux		Shift + 3		Repeat		Text
	USB		Shift + 4		Step		Shift + Pause
	Open / Close		Eject		>>		>>
	TV / Video		TV/R		I<<		I<<
	1 / RDS Display		1		Stop		Stop
	2		2		Play / Pause		Play
	3 / TA		3		Play / Pause		Pause
	4 / PTY -		4		>>I		>>I
	5 / PTY Search		5		Volume +		Vol +
	6 / PTY +		6		Volume -		Vol -
	7		7		Mute		Mute
	8		8		Tuning + / CH +		Ch +
	9		9		Tuning - / CH -		Ch -
	0 / Video Sel		0		Menu		Menu










 



 










 




 
 







Original	Recharge
Return	Back
Up	Up
Right	Right
Down	Down
Left	Left
Enter	Ok
Info	Info
Audio	Dual
Subtitle	Subt
Dolby PL II Mode	Red
Mo/St / Slow	Shift + Play
Dolby PL II Effect	Green
DSP/EQ	3D
Test Mode	Smart
Zoom	Shift + Eject
P.Scan / Tuner Memory	Pre Ch
Logo	Yellow

Original	Recharge
Sound Edit	Media
NT/PAL / Ez View	Options
Slide Mode	AV
Sleep	Sleep
Digest	D. Menu
Dimmer	Blue





Original		Rechange	
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -

Original		Rechange	
	Menu		Menu
	Return		Back
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok

