




 

 

 
 





 







 
 




 




 



























 

 




 





Original	Rechange	Original	Rechange
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	APP		Media
	CH +		Ch +
	CH -		Ch -
	Menu		Menu
	List		List
	Vol +		Vol +
	Vol -		Vol -
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Back		Back
	Exit		Exit
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Audio		Dual
	Subt		Subt
	Text		Text





	Original		Recharge		Original		Recharge
	Still		Pause				
	L -		<<				
	L +		>>				
	EPG		Guide				
	TV / Rad.		TV/R				
	TV / AV		AV				
	OPT		Options				

