 





 

 



 







 



 



 



 

 

 

 





 
 
 

 

 



 
 


 

 











	Original	Rechange		Original	Rechange
	 P100	 Guide / EPG / -/--		 AV	 AV / Input / RDS
	 Power	 Power		 0	 0
	 REV	 Sleep / Timer		 TV	 TV/Radio /
	 DOUB	 Smart / List		 P+	 Up
	 1	 1		 P+	 CH+ / Page+
	 2	 2		 Mute	 Mute / Dimmer
	 3	 3		 TV/TXT	 Text / Goto
	 Hold	 Stop / Hold		 Menu	 Menu / Home
	 4	 4		 Vol-	 Vol-
	 5	 5		 Vol-	 Left
	 6	 6		 OK	 OK
	 SUB	 Subtitle / EQ		 Vol+	 Vol+
	 Update	 Display / Media		 Vol+	 Right
	 7	 7		 SWAP	 Back / Return
	 8	 8		 P-	 CH- / Page-
	 9	 9		 P-	 Down
	 MIX	 D.Menu / Top		 16:9	 Picture / Format





Original	Recharge
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Violet/Info	 Info / Angle
 []	 Zoom / Size
 PC	 Fav / Marker / PC
 PT	 Setup / OPT /

Original	Recharge

