







 




 














 



| Original | Rechange |
|--|---|
|  Power |  Power |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  << |  << / Tune- |
|  Play |  Play / Slow |
|  >> |  >> / Tune+ |
|  < |  << / Preset- |
|  Pause |  Pause / Step / Freeze |
|  > |  >> / Preset+ |
|  Info |  Info / Angle |
|  Stop |  Stop / Hold |
|  Rec |  Rec / Rec Mode |
|  Titles |  Subtitle / EQ |
|  Exit |  Exit / Cancel / Clear |
|  Menu |  Menu / Home |

| Original | Rechange |
|---|--|
|  Left |  Left |
|  Up |  Up |
|  Right |  Right |
|  P + |  CH+ / Page+ |
|  OK |  OK |
|  P - |  CH- / Page- |
|  Down |  Down |
|  P < P |  Smart / List |
|  Back |  Back / Return |
|  Guide |  Guide / EPG / -/-- |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |





| Original | Rechange |
|---|---|
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  PVR |  Display / Media |
|  Page Up |  Shift + CH+ / |
|  Page Down |  Shift + CH- / |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Rechange |
|----------|----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

