




















Original	Rechange	Original	Rechange
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 Play	 Play / Slow	 Right	 Right
 Pause	 Pause / Step / Freeze	 Reset	 Exit / Cancel / Clear
 Stop	 Stop / Hold	 Down	 Down
 <<	 << / Tune-	 Return	 Back / Return
 >>	 >> / Tune+	 Vol+	 Vol+
 I<<	 I<< / Preset-	 Treb+	 CH+ / Page+
 >>I	 >>I / Preset+	 Vol-	 Vol-
 EQ	 Subtitle / EQ	 OSD	 Display / Media
 Zoom	 Zoom / Size	 Treb-	 CH- / Page-
 TV-Mode	 TV/Radio /	 1	 1
 Setup	 Setup / OPT /	 2	 2
 L/R	 Text / Goto	 3	 3
 Input	 AV / Input / RDS	 4	 4
 Menu	 Menu / Home	 5	 5
 Up	 Up	 6	 6





Original	Rechange
7	7
8	8
9	9
10+	Guide / EPG / -/--
0/10	0
P/N	Fav / Marker / PC
Repeat	Green / APP / Repeat
Sub-	Yellow / YouTube / Repeat
Sub+	Blue / Prime Video / Random
Slow	Shift + Play /
A1	Shift + 1
A2	Shift + 2
B1	Shift + 3
B2	Shift + 4
C1	Shift + 5
C2	Shift + 6
D1	Shift + 7

Original	Rechange
D2	Shift + 8
E1	Shift + 9
E2	Shift + Guide / EPG / -/--
E3	Shift + 0
E4	Shift + Fav / Marker / PC

