





 








Original	Rechange
 Standby	 Power
 Mute	 Mute / Dimmer
 L / R	 Audio / Lang I/II
 FAV	 Fav / Marker / PC
 Subt.	 Subtitle / EQ
 GOTO	 Shift + Goto Text /
 Text	 Text / Goto
 Recall	 Back / Return
 Menu	 Menu / Home
 Up / CH +	 Up
 Up / CH +	 CH+ / Page+
 EPG	 Guide / EPG / -/-
 Left / Vol -	 Left
 Left / Vol -	 Vol-
 OK	 OK
 Right / Vol +	 Vol+
 Right / Vol +	 Right

Original	Rechange
 Info	 Info / Angle
 Down / CH -	 Down
 Down / CH -	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 USB	 Shift + 8
 4	 4
 5	 5
 6	 6
 TV / Radio	 TV/Radio /
 7	 7
 8	 8
 9	 9
 0	 0
 Play	 Play / Slow





Original	Recharge	Original	Recharge
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 Rec	 Rec / Rec Mode		
 Repeat	 Shift + Green / Green / APP / REPEAT		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 <<	 << / Preset-		
 >>	 >> / Preset+		
 Red	 Red / Netflix / SEARCH		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / RANDOM		

