



 

 

 



 

 

 

 



 













 





 

 



 

 

 

 

 

 













Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol +		Vol+
	6		6		List		Smart / List
	7		7		CH +		CH+ / Page+
	8		8		Vol -		Vol-
	9		9		CH -		CH- / Page-
	Source		AV / Input / RDS		Fav		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Recall		Back / Return
	Up		Up		Red / <<		Red / Netflix / Search
	EPG		Guide / EPG / -/-		Red / <<		<< / Tune-







 









 

 











 

 













 







 



 

 











Original	Recharge	Original	Recharge
Green / >>	>> / Tune+		
Green / >>	Green / APP / Repeat		
Yellow / I<<	I<< / Preset-		
Yellow / I<<	Yellow / YouTube / Repeat		
Blue / >>	Blue / Prime Video / Random		
Blue / >>	>>  / Preset+		
Text / Play/Pause	Text / Goto		
Text / Play/Pause	Pause / Step / Freeze		
Text / Play/Pause	Play / Slow		
Stop / Still	Stop / Hold		
Timer / Subtitle	Subtitle / EQ		
Size / Aspect	Zoom / Size		
Cancel [≡X]	Shift + Exit / Cancel / Clear		
Radio	TV/Radio /		
Audio / I/II	Audio / Lang I/II		
Rec	Rec / Rec Mode		





Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol+		Vol+
	6		6		List		Smart / List
	7		7		CH+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		CH-		CH- / Page-
	[≡?]/Source		AV / Input / RDS		♥		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	[≡i]/Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Back		Back / Return
	Up		Up		Red		Red / Netflix / Search
	EPG		Guide / EPG / -/--		<<		<< / Tune-





Original	Recharge	Original	Recharge
 Green	 Green / APP / Repeat		
 >>	 >> / Tune+		
 Yellow	 Yellow / YouTube / Repeat		
 I<<	 I<< / Preset-		
 Blue	 Blue / Prime Video / Random		
 >>I	 >>I / Preset+		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 [≡]	 Text / Goto		
 Stop/Still	 Stop / Hold		
 [≡+]	 Picture / Format		
 [≡o]/Subtitle	 Subtitle / EQ		
 [≡◆]/[+]	 Zoom / Size		
 [≡x]	 Setup / OPT /		
 Radio	 TV/Radio /		
 Audio	 Audio / Lang I/II		
 Rec	 Rec / Rec Mode		

