



 




 
 





 

 







Original	Recharge
PP	PP
	Back / Return
	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	P<P
0	0
--	--
	Menu [M]
	Info [i]
	I-II

Original	Recharge
	Mute / Dimmer
	Left
	Up
	Right
	OK
	Down
	Vol-
	Vol+
	CH- / Page-
	CH+ / Page+
	Red / Sound
	Red / Sound
	Green / Picture
	Green / Picture
	Yellow / Feature
	Blue / Install
	Text





Original		Rechange		Original		Rechange	
	[≡o]		Sleep / Timer				
	Hold		Stop / Hold				
	[≡X]		Exit / Cancel / Clear				
	Mix / PIP Swap		Smart / List				
	PIP / Size		Zoom / Size				
	PIP Down / [≡?]		I<< / Preset-				
	PIP Up / Index		>>I / Preset+				
	[TV]		TV/Radio /				
	[AV]		AV / Input / RDS				

