




 



| Original | Rechange |
|-------------|-----------------------|
| Power | Power |
| Mute | Mute / Dimmer |
| Play | Play / Slow |
| Pause/[≡] | Pause / Step / Freeze |
| Stop/[≡+] | Stop / Hold |
| Rec/[≡◆] | Rec / Rec Mode |
| <</[≡o] | << / Tune- |
| <</[≡i] | << / Preset- |
| >> /[≡?] | >> / Preset+ |
| >>/[≡x] | >> / Tune+ |
| Info | Info / Angle |
| OI/II/Audio | Audio / Lang I/II |
| [≡] | Text / Goto |
| ←/<x] | Fav / Marker / PC |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |

| Original | Rechange |
|----------|----------------------------|
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| * | Setup / OPT / |
| 0 | 0 |
| Up | Up |
| [→] | AV / Input / RDS |
| Left | Left |
| OK | OK |
| Right | Right |
| Down | Down |
| Netflix | Shift + Red / Netflix / |
| You Tube | Shift + Yellow / YouTube / |
| Vol+ | Vol+ |





| Original | | Rechange | |
|---|---------------|---|-----------------------------|
|  | Home / Source |  | Menu / Home |
|  | P+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | P- |  | CH- / Page- |
|  | Red |  | Red / Netflix / Search |
|  | Green |  | Green / APP / Repeat |
|  | Yellow |  | Yellow / YouTube / Repeat |
|  | Blue |  | Blue / Prime Video / Random |
|  | EPG |  | Guide / EPG / -/-- |
|  | List |  | Smart / List |
|  | Q.Menu |  | D.Menu / Top |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Original | | Rechange | |
|----------|--|----------|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





| Original | Rechange |
|---|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Play |  Play / Slow |
|  Pause [/≡] |  Pause / Step / Freeze |
|  Stop/[≡+] |  Stop / Hold |
|  Rec/[≡◆] |  Rec / Rec Mode |
|  <</[≡o] |  << / Tune- |
|  <</[≡i] |  << / Preset- |
|  >> /[≡?] |  >> / Preset+ |
|  >>/[≡x] |  >> / Tune+ |
|  Info |  Info / Angle |
|  O) /II/Audio |  Audio / Lang I/II |
|  [≡] |  Text / Goto |
|  ←/<x] |  Fav / Marker / PC |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |

| Original | Rechange |
|---|--|
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  * |  Setup / OPT / |
|  0 |  0 |
|  [→] |  AV / Input / RDS |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Netflix |  Shift +  Shift + Red / Netflix / |
|  YouTube |  Shift +  Shift + Yellow / YouTube / |
|  Vol+ |  Vol+ |





| Original | | Rechange | | Original | | Rechange | |
|---|-------------|---|-----------------------------|----------|--|----------|--|
|  | Home/Source |  | Menu / Home | | | | |
|  | P+ |  | CH+ / Page+ | | | | |
|  | Vol- |  | Vol- | | | | |
|  | P- |  | CH- / Page- | | | | |
|  | Red |  | Red / Netflix / Search | | | | |
|  | Green |  | Green / APP / Repeat | | | | |
|  | Yellow |  | Yellow / YouTube / Repeat | | | | |
|  | Blue |  | Blue / Prime Video / Random | | | | |
|  | EPG |  | Guide / EPG / -/-- | | | | |
|  | List |  | Smart / List | | | | |
|  | Q.Menu |  | D.Menu / Top | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

