




 







 
 


 



 




 







 


 
 


 
 


 


 




 


 
 
 

 










 


 

 



 
 



 
 
 


 

 
 

 
 
 

 








Original		Rechange		Original		Rechange	
	Standby/On		Power		Memo/Mark		Pre Ch
	Tv/Video		TV/R		PR/CH+		Ch +
	Output Select		AV		PR/CH-		Ch -
	DV		Green		F1		Shift + 1
	HDD		Yellow		F2		Shift + 2
	DVD		Blue		Edit		Guide
	1		1		Prog		Sleep
	2		2		Top Menu		Shift + Menu
	3		3		Navigation		List
	4		4		Menu		Menu
	5		5		Return		Back
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		Enter		Ok
	Cancel		Exit		I<<		I<<





	Original	Recharge		Original	Recharge
	>>I		>>I		Progressive Scan
	<</Slow-		<<		Text
	Play		Play		Set Up
	>>/Slow+		>>		Options
	Rec		Rec		
	Stop/Clear		Stop		
	Pause		Pause		
	Display		Info		
	On Screen		3D		
	←		Media		
	→		Smart		
	Rec		Format		
	Audio		Dual		
	Subtitle		Subt		
	Angle/EE Check		Red		
	EE		Eject		
	Dubbing		D. Menu		







Original	Recharge
Standby/On	Power
Tv/Video	TV/R
Mute	Mute
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Cancel	Back
Vol+	Vol +
Vol-	Vol -
PR/CH+	Ch +

Original	Recharge
PR/CH-	Ch -
Input Select	AV
F1	Smart

