






 
 


 
 
 
 


 

 
 


 


 


 


 

 









Original		Recharge		Original		Recharge	
	POWER		Power		≧10 / -/--		Guide
	TV		TV/R		Cancel		Exit
	VCR / AUX		Shift + TV/R		CH +		Ch +
	SLEEP		Sleep		CH -		Ch -
	TV / AV		AV		VOL +		Vol +
	TUNER / BAND		Smart		VOL -		Vol -
	DVD / CD		Media		SKIP PREV.		I<<
	1		1		SKIP NEXT		>>I
	2		2		SLOW/SEARCH		<<
	3		3		SLOW/SEARCH		>>
	4		4		STOP		Stop
	5		5		PAUSE		Pause
	6		6		PLAY		Play
	7		7		TOP MENU / DIR. NAV.		D. Menu
	8		8		MENU / PLAY LIST		Menu
	9		9		UP		Up
	0		0		LEFT		Left





Original	Recharge
ENTER	Ok
RIGHT	Right
DOWN	Down
DISPLAY / TV VOL-	Info
DISPLAY / TV VOL-	Shift + Vol -
RETURN / TV VOL+	Shift + Vol +
RETURN / TV VOL+	Back
SUBWOOFER	3D
SFC	Green
C. FOCUS	Shift + 1
SUPER SRND.	Format
DOLBY PL. II	Dual
Mix 2CH	Shift + Subt
C. S. M.	Red
POSITION	Pre Ch
AUDIO	Shift + Dual
ZOOM	Eject

Original	Recharge
SETUP	Options
MUTING	Mute
FL DISPLAY	Shift + Info
PAGE	Shift + 2
GROUP	Shift + 3
REPEAT	Text
PLAY MODE	Shift + Play
TEST	Yellow
CH. SELECT	List
QUICK REPLAY	Blue
SUBTITLE	Subt












 

 





 




 

 

 

 

 








 


Original	Recharge
Power	Power
Power AV	+  Shift + Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
$\geq 10$ / -/-	GUIDE Guide
TV/AV	TIMER AV AV
CH+	+ Ch +
CH-	CH - Ch -
TV VOL+	+ Vol +

Original	Recharge
Tv Vol-	Vol -





Original	Recharge
 Power	 Power
 Power AV	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 $\geq 10$ / -/-	 GUIDE
 >>	 >>
  <<	  <<
 <<	 <<
 >>	 >>

Original	Recharge
 Pause	 Pause
 Play	 Play
 Stop	 Stop

