
 
 

 









 

 








 


Original	Rechange
 Power	 Power
 PREMIUM NET	 Smart
 Guida	 Guide
 Menu	 Menu
 Info	 Info
 Vol +	 Vol +
 Vol -	 Vol -
 P +	 Ch +
 P -	 Ch -
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Original	Rechange
 Blue	 Blue
 Back	 Back
 Exit / Stop	 Exit
 Exit / Stop	 Stop
 << REW	 <<
 >> FWD	 >>
 Pause / Play	 Play
 Pause / Play	 Pause
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Original	Rechange
 0	 0
 Lista	 List
 Opzioni	 Options
 Text	 Text
 TV / Rad	 TV/R
 APP	 Shift + Media
 Source	 AV
 I<< Prev	 I<<
 Rec	 Rec
 File	 Media
 >>I Next	 >>I

Original	Rechange

