








 









 



 











 



 



 





 

 


 


 





 








Original		Rechange		Original		Rechange	
	TV		TV/R		Yellow		Yellow
	Video		Smart		Blue		Blue
	PC		Media		1		1
	Text		Text		2		2
	P+		Ch +		3		3
	Up		Up		4		4
	P-		Ch -		5		5
	Down		Down		6		6
	Right		Right		7		7
	Vol+		Vol +		8		8
	Left		Left		9		9
	Vol-		Vol -		0		0
	Menu		Menu		-/--		Guide
	Menu		Ok		L / ?		List
	Mute		Mute		Freeze		Pause
	Red / M		Red		M/S		Options
	Green		Green		PIP		3D





Original	Recharge	Original	Recharge
 Auto	 Back		
 F[+]	 Format		
 i	 Info		
 F1	 Shift + 1		
 Clock	 AV		
 F2	 Shift + 2		
 F3	 Shift + 3		
 F4	 Shift + 4		
 Power	 Power		

Original	Recharge

