



















 





 

 

 







Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Red / Media	 Red / Netflix / Search
 Red / Media	 Display / Media
 Green / TV	 Green / APP / Repeat
 Green / TV	 TV/Radio /
 Yellow / Web	 Yellow / YouTube / Repeat
 Blue / APP	 Blue / Prime Video / Random
 Blue / APP	 Smart / List
 Vol-	 Vol-
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Vol+	 Vol+
 Home	 D.Menu / Top
 Up / CH+	 CH+ / Page+
 Up / CH+	 Up
 Return	 Back / Return

Original	Rechange
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down / CH-	 CH- / Page-
 Down / CH-	 Down
 Mouse	 Info / Angle
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 1/A/a	 Guide / EPG / -/-







Original		Rechange		Original		Rechange	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		OK		OK
	Red / Media		Red / Netflix / Search		Right		Right
	Red / Media		Display / Media		Menu		Menu / Home
	Green / TV		Green / APP / Repeat		Down / CH-		Down
	Green / TV		TV/Radio /		Down / CH-		CH- / Page-
	Yellow / Web		Yellow / YouTube / Repeat		Mouse		Info / Angle
	Blue / APP		Blue / Prime Video / Random		1		1
	Blue / APP		Smart / List		2		2
	Vol-		Vol-		3		3
	I<<		I<< / Preset-		4		4
	>>I		>>I / Preset+		5		5
	Vol+		Vol+		6		6
	Home		D.Menu / Top		7		7
	Up / CH+		Up		8		8
	Up / CH+		CH+ / Page+		9		9
	Return		Back / Return		1/A/a		Guide / EPG / -/-



